<u>iCAST</u>



Installation must be performed by qualified personnel. Hand dryer must be grounded.

 \cdot Remove the two tamper-proof cover attachment screws using the supplied key. Tilt the cover outward and unhook at the top.

 \cdot Use the chart below to determine the correct height of the base-plate. When two or more dryers are installed, they should be placed no closer than 60cm (24") between centers. Mark the location of the four mounting holes.

 \cdot All dryers must be fed by two power conductors and one ground wire. For wall wiring, carry the electrical wire to the dryer and attach it to the baseplate knockout using an approved connector.

 \cdot Attach the baseplate firmly to the wall. For wood walls or wood studs, use minimumb No. 12 screws of proper length to ensure 25mm (1") minimum stud penetration. For masonry walls use expansion bolts or anchors for 6mm (1/4") screws of proper length to ensure penetration 6mm (1/4") deeper than anchor. Shim if necessary to ensure that the baseplate is level and flat against the wall.

 \cdot For surface wiring, remove the knockouts from the dryer inlet grill and the outlet grill bracket and bring the conduit to the dryer from below. Attach the conduit to the outlet grill bracket using an approved connector.

 \cdot Connect the two power leads to the terminal block on the circuit board. Tug gently on the wires to ensure that they are held tightly.

Attach the ground wire securely to the ground screw on the wallplate.

• Replace the dryer cover. Hook the cover onto the two cap screws at the top and pivot the bottom of the cover over the metal tabs on the inlet grill. Replace the two tamper-proof screws, taking care not to cross-thread or over-tighten them.

 \cdot IMPORTANT: After turning on electrical power, wait 5 seconds before attempting to operate dryer.


Cleaning & Maintenance

- Regularly clean exterior surfaces and wash with mild soap.
- Remove accumulated dust from air inlet areas.
- Ensure that infrared sensor lens is clean and unobstructed.
- Once per year, or more frequently if dryer is installed in a dusty, greasy, or heavy use environment:
- IMPORTANT: Turn off the breaker at electrical panel or source.
- Remove cover.
- Remove accumulated dust from mechanism.
- Replace cover and restore power.

IMPORTANT: It takes up to 3 minutes after power-on till hand dryer be ready to operate. When device turns on, it tries to connect to the network for two times and each times it takes up to 90 seconds. If device is not able to connect to the network, the modem turns off and device works as a standard hand dryer

15

NOT AVAILABLE

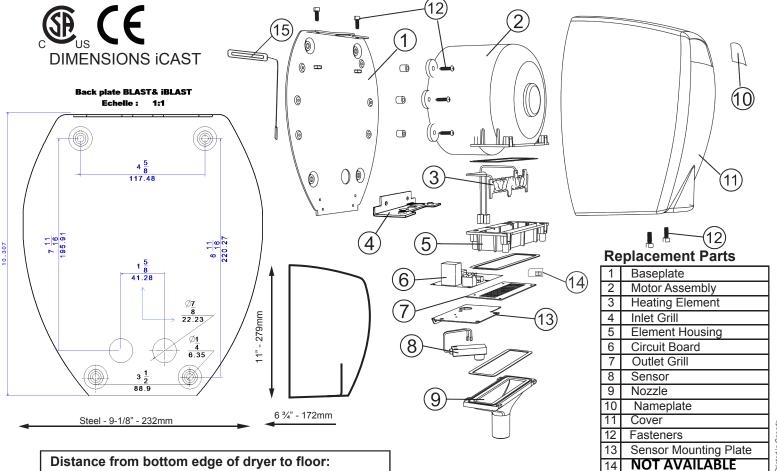

iCAST

SPECIFICATIONS

SPECIFICATIONS

Voltage: Universal - 115/208/230VAC 50/60Hz Wattage: 1450 watts Amps: 12.6A @ 115VAC, 6.3A @ 230VAC Motor: 20,000 RPM high-output universal Air velocity: 19,000 linear feet per minute Discharged air temperature: 136°F / 58°C at ambient temperature 68°F / 20°C Sensor: Solid state infra-red, self-calibrating Circuit breaker: Bi-metallic temp. limiting, auto-resetting Available Cover material: Steel, 16ga (1.5mm), porcelain enamel finish Stainless Steel, 16ga (1.5mm), brushed or mirror polish Cover attachment: Tamper-proof screws Net weight: 11lbs / 5kg

Dimensions (H x W x D):

11" x 9-1/8" x 6 ³/₄" (279mm x 232mm x 172mm) Warranty: 10 years parts only Available finishes: Steel Cover - White or Black Stainless Steel Cover - Brushed or Polished

FEATURES

Unsurpassed speed – Blows water off hands and evaporates residual moisture with ultra-high velocity warm air. Dries completely in 10 seconds

Universal voltage - Auto-sensing circuit instantly adjusts to 115, 208 or 230 volts

Intelligent sensor – Exclusive self-calibrating infra-red sensor continuously monitors and adjusts to compensate for changes in ambient conditions

Steel Cover – Choose 16 ga steel with porcelain enamel, or 16ga stainless steel with a brushed or mirror polished finish

Compact, modern design – Elegant housing; the smallest high-velocity hand dryer on the market

Environmentally friendly – Uses 1/6 the energy of conventional hand dryers and costs 25 times less than paper towels to operate

Long lasting - Virtually indestructible cover and high quality mechanism warranted for 10 years

Wireless control - through the online portal; allows for customization of the product features such as personalized greeting, dryer sensitivity, activation distance, easy diagnosis and troubleshooting

Mobile Device Access - Unit can be controlled through mobile devices, receive SMS test communications on the status of the unit

iCAST SCREEN SET UP:

STEP 1: Go to the gear box on the home screen, when prompted enter passcode: 1234

STEP 2: You have now access to the main dashboard and all the dryer functions (diagnostic, language, locks, etc.)

STEP 3: Use the SD card included to upload all desired files







Replacement Parts

	1	Baseplate	1	
	2	Motor Assembly	1	
	3	Heating Element		
	4	Inlet Grill		
	5	Element Housing		
	6	Circuit Board		
	7	Outlet Grill	1	
	8	Sensor		
	9	Nozzle	1	
	10	Nameplate	1	
	11	Cover]	
	12	Fasteners		
	13	Sensor Mounting Plate		
	14	NOT AVAILABLE	Ì	
	15	NOT AVAILABLE		

Tel:1	355 550 0303
WWW.	comaccorporation.com

Distance from bottom edge of dryer to floor:						
Men						
Women						

Children 8-10 years

Children 11-13 years

Children 14-16 years